


РЪКОВОДСТВО НА ПОТРЕБИТЕЛЯ

- 3x12" Високоговорител
- 2 Безжични Микрофона
- Дистанционно управление
- Функции: USB/ FM/ SD /AUX
вход/ БЛУТУТ/ X-БАС
- Led осветена
- Високочестотен
Високоговорител
- Вход за микрофон
- AUX вход/
Вход за китара
- Функция „Запис“

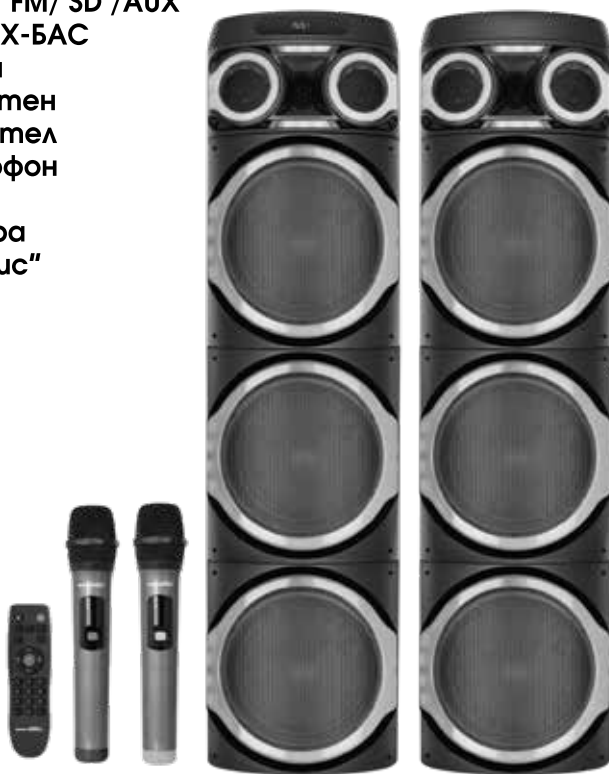

Пикова Мощност: 2000 W/ RMS: 500 W
Захранване: 115-230V, 50Hz

ПРЕДИ ДА ЗАПОЧНЕТЕ РАБОТА С УРЕДА, ПРОЧЕТЕТЕ ВНИМАТЕЛНО ТОВА РЪКОВОДСТВО НА ПОТРЕБИТЕЛЯ.

ВАЖНИ МЕРКИ ЗА БЕЗОПАСНОСТ

Преди да използвате това устройство, прочетете всички инструкции за безопасност и експлоатация, като същевременно спазвате всички указания за безопасна работа. Тези инструкции за безопасност и експлоатация трябва да се съхраняват, така че да можете да се консултирате с тях при нужда.

1. Защита на електрозахранването: Убедете се, че кабелът на електрозахранването не е натоварен, върху него няма тежки предмети. Обърнете специално внимание на щепсела на захранващия кабел и изхода на устройството. НЕ удължавайте електрическия удар, НЕ дърпайте и не влачете захранващия кабел.

2. Вентилация: Устройството трябва да се постави на вентилирано място. НЕ поставяйте диск върху него или кърпа, за да го покриете. Разстоянието до стената не трябва да е по-малко от 10 сантиметра. НЕ поставяйте устройството върху леглото, дивана, килима или други предмети с подобна повърхност в случай на добра вентилация.

3. Демонтаж на корпуса: НЕ демонтирайте корпуса. Ако някой докосне вътрешните компоненти, той вероятно ще получи сериозен токов удар.

4. Необичайна миризма: Когато усетите необичайна миризма и дим, незабавно изключете захранването и издърпайте плюса от изхода на стената. Свържете се с магазина, от който сте го купили или най-близкия ремонтен център.

Внимание: Устройството се прилага към захранване от 220-240V 50/60Hz.

Използвайте стандартно захранване.

Уверете се, че захранването е правилно, преди да го използвате.



ИНСТРУКЦИЯ ЗА РАБОТА С МИКРОФОН

- Използване на Безжичен микрофон - ефективно разстояние е в рамките на 10 метра. Моля, не използвайте микрофона повече от валидния диапазон. Когато силата на батерията намалява е възможно сигналът от източника да получи радиосмущения, това ще скъси използваното разстояние.
 - За да постигнете най-добър ефект от пеенето, трябва да се спазва разстоянието между устата и микрофона през 5-15 см, като най-добрият ъгъл е 45 градуса.
 - Ако имате повече от два комплекта активни високоговорители с безжични микрофони и искате да ги използвате заедно по едно и също време, моля, изберете стандартна честота на различните устройства, също така трябва да има поне 10 метра разстояние между два комплекта високоговорители на една и съща честота.
- За да не създавате смущения и други ненужни проблеми. В същото време не поставяйте високоговорителите твърде близо до VCD/CD/DVD по време на употреба. Те могат да предизвикат силни честотни смущения на оборудването. За да се избегнат взаимни смущения между една и съща честота и да бъде засегната пряко нормалната работа на приемането на сигнала от безжичния микрофон.

ИНСТРУКЦИЯ ЗА РАБОТА С BLUETOOTH

1. Натиснете MODE, за да изберете режим на въвеждане на BLUETOOTH.
 2. Отворете функцията BLUETOOTH на мобилния телефон, ЛАПТОПА, I-PAD и т.н. преносимо устройство и потърсете Bluetooth името на високоговорителя - парола за връзка **ЕК-3124ХВ**.
 3. Преносимите устройства избират bluetooth високоговорителя и го съпоставят. Ако съпоставянето е успешно, ще чуете звуков сигнал от високоговорителя.
 4. Можете свободно да се наслаждавате на музика от преносимо устройство от високоговорител посредством функцията БЛУТУТ
- Моля, обърнете внимание:** Разстоянието на преносимото устройство с блутут е 10m-15m без стени и други прегради от този тип.

*Bluetooth® е търговска марка или регистрирана търговска марка на Bluetooth SIG Inc
iBastek® е търговска марка на Bastek Corp. Всички останали търговски марки са
собственост на съответните им собственици.*


ХАРАКТЕРИСТИКИ НА ПРОДУКТА

RMS Мощност: 500W/ PMPO: 2000W

- Изходно съпротивление: 4 Ω
- Сигнал/ шум: 96 $\pm$ 3 dB
- Честотна Характеристика:
43-18K Hz


- Максимално звуково налягане SPL:
 ≥ 70 dB
- Модули: 1" + 2x4" + 3x12"

ДИСТАНЦИОННО УПРАВЛЕНИЕ

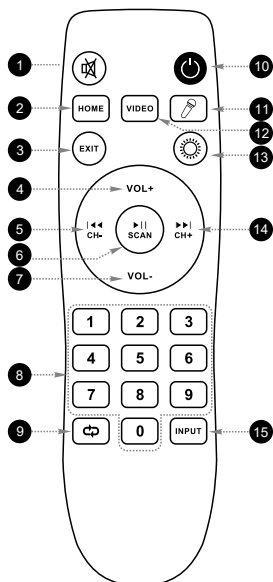



1. Бутон за заглушаване
2. Начална страница
3. Клавиш за изход
4. Клавиш за увеличаване на звука
5. Предишен / FM ch- бутон
6. Пускане/пауза в FM режим: продължително натискане за автоматично търсене на канали
7. Клавиш за намаляване на звука
8. Клавиш за избор на песни
9. Повторете клавиша
10. Ключ за режим на готовност
11. Приоритет на микрофона функционален превключвател
12. Видео ключ
13. LED (вкл./изкл.) ключ
14. Напред/ FM ch- бутон
15. Входен превключвател (За да изберете източник на входящ сигнал)

ОПИСАНИЕ НА КОНТРОЛЕН ПАНЕЛ

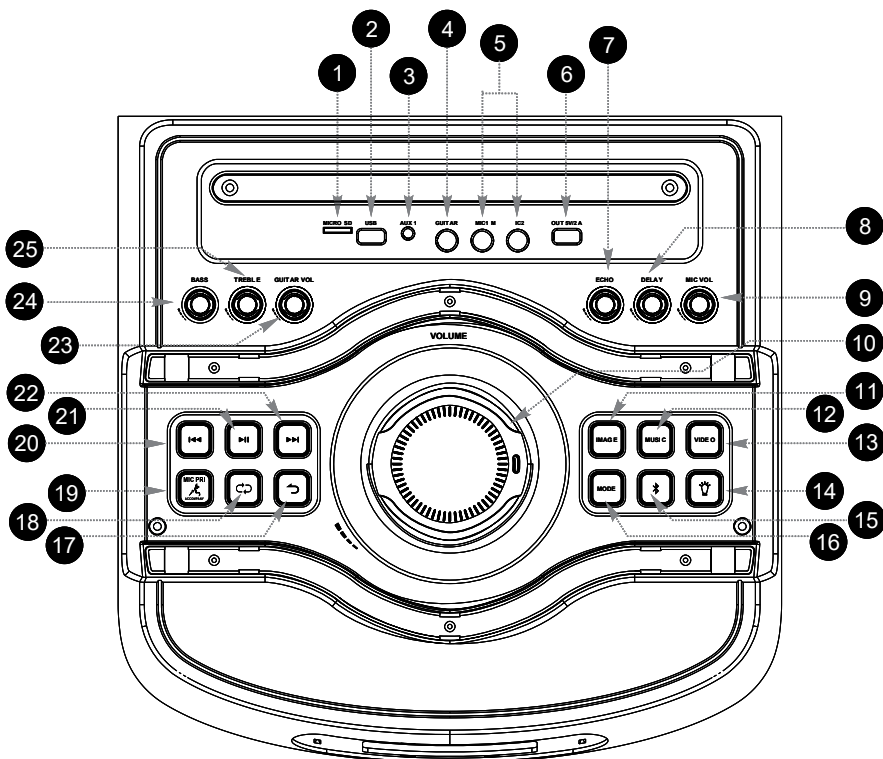

- | | |
|----------------------------------|------------------------------------|
| 1. MICRO SD ЖАК | 17. КЛАВИШ ЗА ИЗХОД |
| 2. USB ЖАК | 18. БУТОН ЗА ПОВТОРЕНИЕ |
| 3. AUX ВХОД | 19. ПРИОРИТЕТ НА МИКРОФОНА: |
| 4. ВХОД ЗА КИТАРА | (кратко натискане) |
| 5. ВХОД ЗА МИКРОФОН | АКОМПАНИМЕНТ: |
| 6. USB ЗАРЕЖДАНЕ 5V/2A | (дълго натискане за 3 секунди) |
| 7. КОНТРОЛ НА ЕХОТО | 20. ПРЕДИШЕН & FM КАНАЛ - КЛЮЧ |
| 8. КОНТРОЛ НА ЗАБАВЯНЕ | 21. БУТОН ЗА ВЪЗПРОИЗВЕЖДАНЕ/ПАУЗА |
| 9. КОНТРОЛ НА ЗВУКА НА МИКРОФОНА | И FM СКАНИРАНЕ |
| 10. КОНТРОЛ НА СИЛАТА НА ЗВУКА | 22. НАПРЕД & FM КАНАЛ + БУТОН |
| 11. КЛЮЧ ЗА ИЗОБРАЖЕНИЕ | 23. КОНТРОЛ НА ЗВУКА НА КИТАРА |
| 12. МУЗИКАЛЕН КЛЮЧ | 24. КОНТРОЛ НА СИЛАТА НА ЗВУКА НА |
| 13. ВИДЕО КЛЮЧ | БАСА |
| 14. LED КЛЮЧ | 25. КОНТРОЛ НА ЗВУКА НА ВИСОКИТЕ |
| 15. BLUETOOTH КЛЮЧ | ЧЕСТОТИ |
| 16. БУТОН ЗА РЕЖИМ | |

ОПИСАНИЕ НА ЗАДЕН ПАНЕЛ

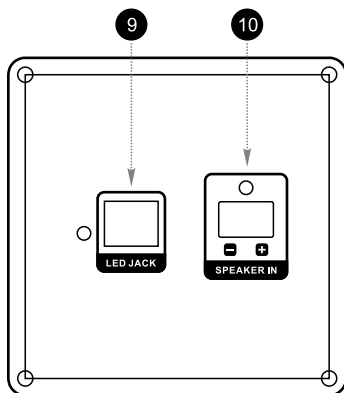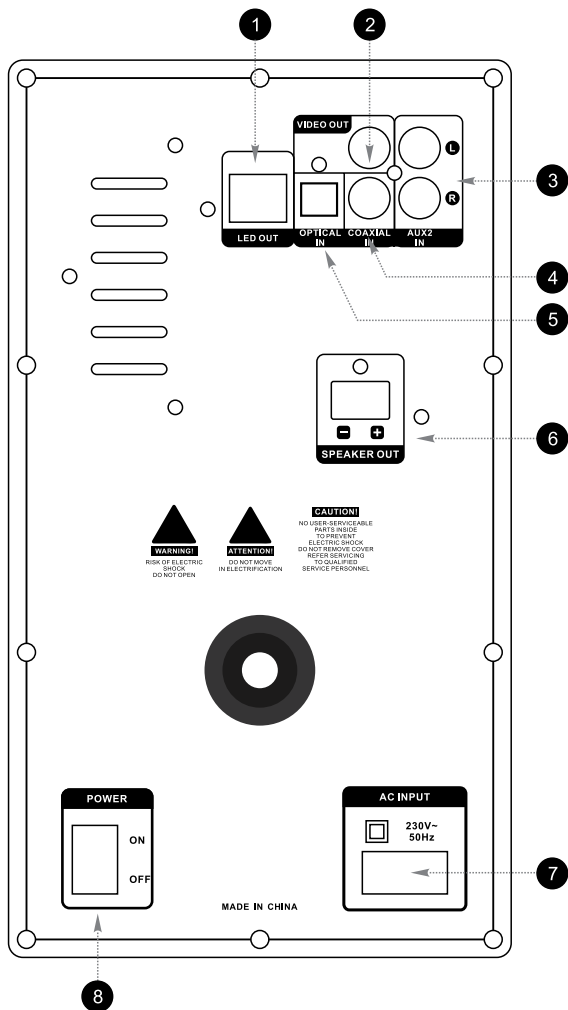

1. LED изходен жак
2. Видео изходен жак
3. Аудио входен жак
4. Коаксален входен жак
5. Оптичен входен жак
6. Жак за изход на високоговорителя
7. АС вход 230V 50Hz
8. Превключвател на захранването
9. LED вход
10. Входен жак за високоговорител

ТОНКОЛОНА
МОДЕЛ: ЕК-3124ХВ



Този символ означава, че продукта не трябва да се изхвърля заедно с останалите битови отпадъци, за да се избегне замърсяване на околната среда и нараняване на хора. Отнесете уреда в специализиран пункт за рециклиране на електроуреди.



ВСИЧКИ УРЕДИ С МАРКА ЕЛЕКОМ ОТГОВАРЯТ НА БДС!

Артикул: Тонколона от 2 части; **Модел:** ЕК-3124 ХВ


Производител: Топ Троникс ООД; ЕИК 130985327
България; София, бул. Петко Ю. Тодоров 4, вх. А, п.к. 1

За контакти:

моб.: (088) 566 70 15, e-mail: elekom@elekom.bg,
www.elekom.bg

INSTRUCTION MANUAL

- 3x12" Woofers
- 2 Wireless Microphones
- Remote Control
- Functions: USB/ FM/ SD /AUX input/ BLUETOOTH/ /X-BASS
- Led Lightflower drive
- AUX in line input/ Guitar Input
- Recording Function

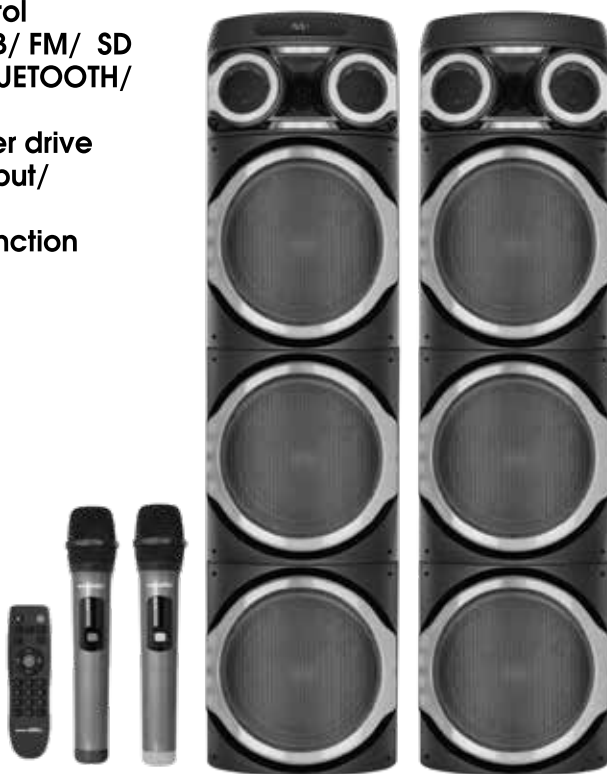

PMPO Power: 2000 W/ **RMS:**500 W

Power Supply:

220-240V, 50-60Hz

BEFORE USING THIS PRODUCT, PLEASE READ THE OPERATING INSTRUCTION CAREFULLY!

SPEAKER

MODEL: EK-3124XB



IMPORTANT SAFETY MEASURES

Before using this machine, please read all the safety and operating instructions, meanwhile, please observe all the indications about safe operating. These safety and operating instructions should be kept in condition of consultation.



1. Protection of electric power supply line: Be aware that the electric power supply line is not tramped, pressed by heavy objects. Pay special attention to the plug of power supply line and outlet on the machine. DO NOT lengthen the electric shock, DO NOT pull or drag or the power supply line.

2. Ventilation: This set must be put in ventilated place. DO NOT put disk on it or cloth to cover it. The distance away from the wall should not be less than 10 centimeters. DO NOT put this set on the bed, sofa, carpet or other objects with similar surface in case of good ventilation.

3. Casing Dismantling: DO NOT dismantle the case. If one touches the inner components, he will probably get serious electric shock.

4. Unusual smell: When you discover unusual smell and smoke, cut power supplies immediately and pulls out the plus from the outlet on the wall. Contact the sell shop or nearest repairing center.

Attention: This set applies to AC 220V~240V/50Hz~60Hz power supply. Use standard power supply. Do not use power supply of small output and unsteady voltage.

TECHNICAL SPECIFICATIONS

- | | |
|---|---|
| 1. This set applies to AC 220V-240V, 50/60Hz | Frequency Response: 43-18K Hz |
| 2. AC power: battery can be charged when connected to AC power. Red light on battery is charging, it will change to green once battery complete charge. | S/N Ratio: ≥ 70 dB |
| 3. Internal battery will be charged even device switch off when plugged in to AC power | Drive Unit: 1" + 2x4" + 3x12" |
| 4. Adjust function keys to your personal audio preference. | Wireless Mic Frequency: 261.8/239.4 MHz |
| RMS Power: 500W/ Impedance: 4 Ω | FM Frequency: 87.50-108.00 MHz |
| Input Sensitivity: 96 $\pm$ 3 dB | Bluetooth Name: EK-3124XB |

BLUETOOTH INSTRUCTION

First connection of bluetooth with cellphone

[Turn the power on, press the „MODE” key or „INPUT” key on the panel or remote control, and switch the speaker to Bluetooth channel. Then turn on the mobile phone Bluetooth function.

2.Search the Bluetooth device list and select the Bluetooth name „EK-3124XB”.The speaker will make a notification tone when the connection is successful.

3.Select the Bluetooth which is on Bluetooth device list.

Open the mobile phone music player and play a song.

The music is transferred via Bluetooth and sound comes out through the Bluetooth speaker.

Connect to the mobile phone which already been connected before.

When the mobile phone Bluetooth is turned on, press the „MODE” and select to Bluetooth mode, the Bluetooth speaker will automatically connect to the mobile phone which is connected last time. Another way is that you can search the Bluetooth list on your mobile phone, when you find the „EK-3124XB” , select it and connect your mobile phone to the Bluetooth speaker.

Bluetooth ® is a trademark or registered trademark of Bluetooth SIG Inc.

iBastek ® is a trademark of Bastek Corp.

All other trademarks are the property of their respective owners.


OPERATION WIRELESS MICROPHONE

- To adjust the microphone volume knob to you like when you are demo.
- Please turn off the microphone after using.
- Wireless microphone effective distance within 10 meters. In order to not affecting the effect, please do not use over than the valid range. When the battery decreased or the environment radio interference source signal is too strong, it will shorten the using distance.
- To achieve the best effect of singing, the distance of mouth and microphone should be keep in 5-15 cm, and the best angle is 45 degrees.
- Please don't use the same frequency of microphone to sing at the same time in a short distance.It will lead to silence or interference.
- If you buy more than two sets of active speaker with wireless microphones and want to use together at the same time, please select standard frequency of different varieties. If not, there must be 10 meters distance at lease between two sets speaker in same frequency. So as not to cause interference and other unnecessary trouble. At the same time, don't put speakers too close to VCD/CD/DVD during using. They are strong interference frequency equipments. In order to avoid mutual interference between the same frequency and directly affects the normal work of the wireless microphone signal receiving.

SPEAKER MODEL: EK-3124XB




REMOTE CONTROL

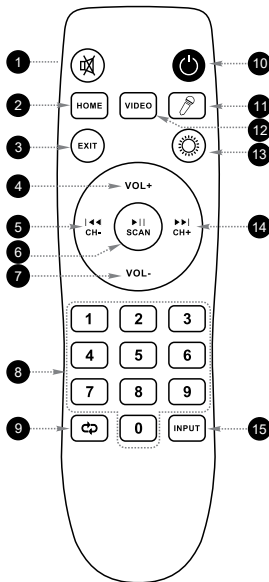

- | | |
|--------------------------|-------------------------------|
| 1. Mute Key | 11. Microphone priority |
| 2. Home page | function switch |
| 3. Exit key | 12. Video key |
| 4. Volume increase key | 13. LED (on/off) Key |
| 5. Previous / FM ch- key | 14. Next/ FM ch- key |
| 6. Play/ pause under FM | 15. Input switch |
| Mode: | To select input signal source |
| long press for automatic | |
| channel search | |
| 7. Volume decrease Key | |
| 8. Tracks select key | |
| 9. Repeat key | |
| 10. Standby key | |

TOP PANELS OPERATING INSTRUCTIONS

- | | |
|------------------------------|---------------------------------------|
| 1. Micro SD jack | 14. LED key |
| 2. USB jack | 15. Bluetooth key |
| 3. AUX input | 16. Mode key |
| 4. Guitar input | 17. Exit key |
| 5. Microhone input | 18. Repeat key |
| 6. USB charge 5V/2A | 19. Microphone priority : short press |
| 7. Echo control | Accompany : long press for 3 seconds |
| 8. Delay control | 20. Previous & FM channel - key |
| 9. Microphone volume control | 21. Play/Pause & FM scan key |
| 10. Volume control | 22. Next & FM channel + key |
| 11. Image key | 23. Guitar volume control |
| 12. Music key | 24. Bass volume control |
| 13. Video key | 25. Treble volume control |

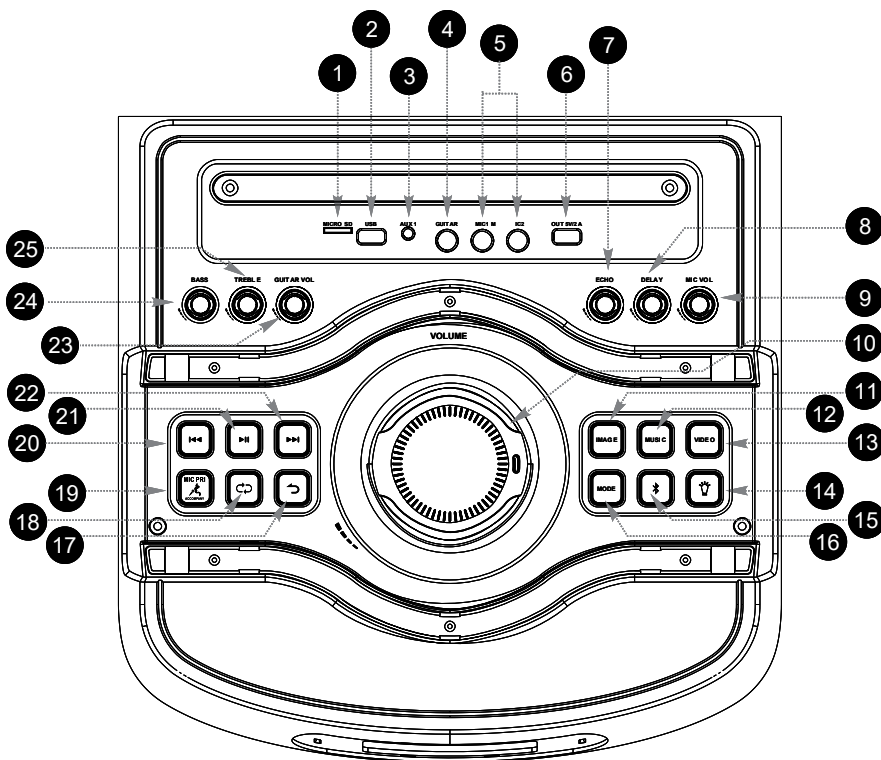


BACK PANEL OPERATING INSTRUCTIONS

1. LED Output jack
2. Video Output jack
3. Audio input jack
4. Coaxial input jack
5. Optical input jack

6. Speaker Out jack
7. AC Input 230V 50Hz
8. Power Switch
9. LED Input
10. Speaker Input jack

SPEAKER MODEL: EK-3124XB

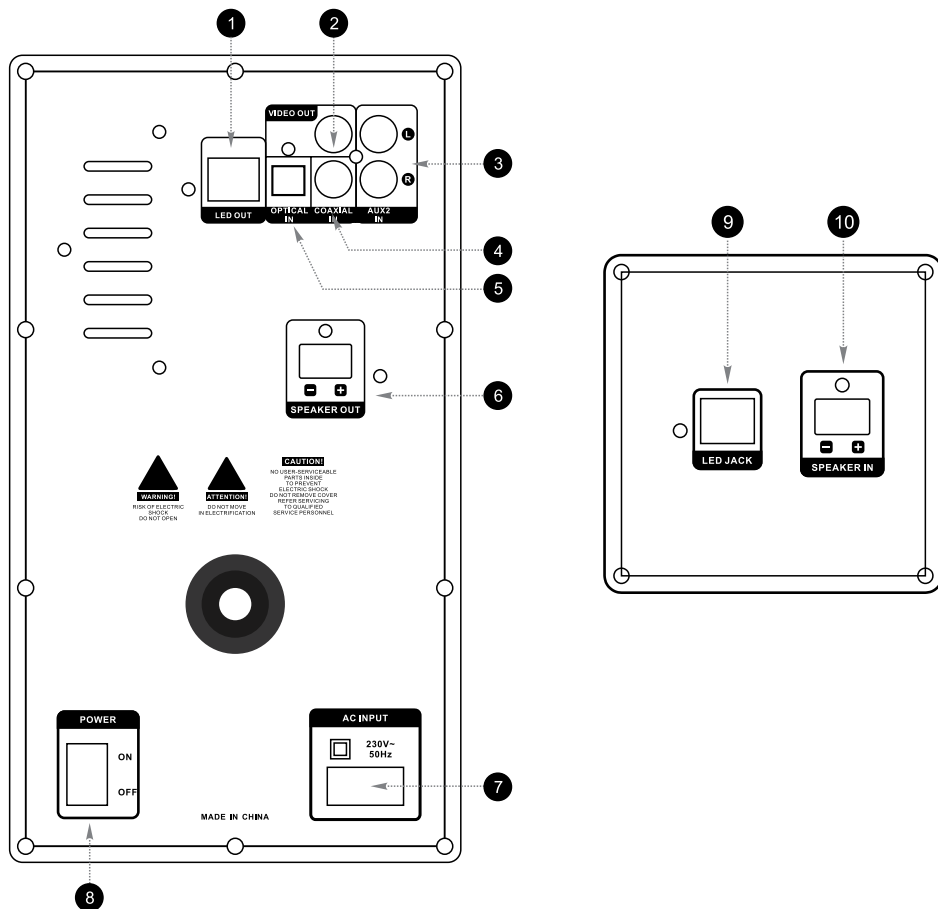

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



ELEKOM IS REGISTERED TRADE MARK FOR EUROPE WITH PATENT №948329/2007 - GENEVA
FROM WORLD INTELLECTUAL PROPERTY ORGANIZATION
ELEKOM IS REGISTERED TRADE MARK FOR BULGARIA WITH №48734/2004 FROM BULGARIAN
PATENT DEPARTMENT ORGANIZATION

Article: Speaker - Active/ Passive; **Model:** EK-3124 XB
Manufacturer: Top Troniks LTD; VAT 130985327
Bulgaria; Sofia, Petko Y. Todorov 4 Blvd., Ent.A, p.b.1
Mobile: +35988 5667015,
E-mail: elekom@elekom.bg, www.elekom.bg