

BG



ОПИСАНИЕ:


- 1) Тяло на уреда
- 2) Глава на уреда
- 3) Приставка за чувствителни зони
- 4) Приставка 5 мм
- 5) Приставка 3 мм
- 6) USB кабел за зареждане
- 7) Четка за почистване

ВНИМАНИЕ:

- Не се препоръчва използването на уреда от лица под 12 г.
- Използвайте уреда само по предназначение и за хора
- Не използвайте уреда, ако кожата ви е раздразнена, има наличие на рана и не се чувствате добре
- Не изплаквайте уреда, използвайте само четката за почистване
- Не излагайте уреда и батерията на огън или нагорещено място. Има опасност от експлозия на батерията.
- Изхвърляйте батериите при нужда само на обозначените за това места.

ЗАРЕЖДАНЕ/ ПРЕЗАРЕЖДАНЕ НА БАТЕРИЯТА:

- Уверете се, че батерията е напълно заредена преди да използвате уреда
- Поставете кабела в обозначеното място на уреда и включете USB порта към мрежата за зареждане
- За пълното зареждане на батерията са необходими около 4 часа, лампичката ще загасне, когато е напълно заредена. Можете да използвате уреда **45 мин.** без кабел, след пълно зареждане.

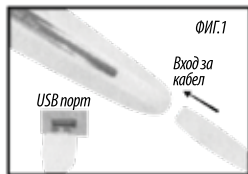

СМЯНА НА ОСТРИЕТО/ ПОСТАВЯНЕ:

- Възможна е смяна на острието, за най-добри резултати и при нужда сменяйте на всеки 5 месеца
- Премахнете всички приставки от главата на уреда
- Натиснете клипса, който държи главта към тялото на уреда и задръжте, за да не падне.
- Поставете новото острие/ глава по обратния път.



ВНИМАНИЕ:

- ИЗПОЛЗВАЙТЕ САМО В СУХИ ПОМЕЩЕНИЯ
- Не изплаквайте главата или тялото на уреда
- Пазете уреда далеч от деца
- Махнете кабела преди да почистите с предназначената за това четчица
- Не Използвайте уреда, докато е включен в захранващата мрежа. Може да повредите батерията.
- Батерията на уреда е литиево-йонна не излагайте на слънце и огън
- Не използвайте уреда при раздразнена кожа и наранена.
- Преди първа употреба проверете изправността на уреда. При наличие на проблем се свържете с носителя. Не се опитвайте да разглобявате и поправяте уреда сами.
- Уредът не е подходящ за използване на глава/ скалп и гениталии.



MODEL: EK-292 W BODY SHAVER




DESCRIPTION:

- 1) Body of the Unit
- 2) Head of the Unit
- 3) Sensa guard

- 4) Trimm comb 5 mm
- 5) Trimm comb 3 mm
- 6) USB Charging cord
- 7) Cleaning Brush

CAUTION:

- Not intended for persons under 12 years
- Only use for its intended use as described in this manual
- Do not use on irritated skin, open wounds or if you are experiencing breakouts. Discontinue use if skin irritation occurs
- Do not rinse head or unit under water, or submerge.
- Do not dispose of battery in fire. Battery may explode or leak.
- Dispose of old batteries according to all applicable local regulations.

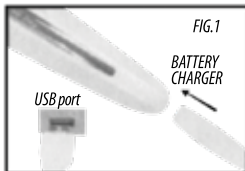

CHARGING/ RECHARGING

- Make sure the Unit is fully charged before use.
- Plug the small end of the Charging Cable into the and large plug into the USB Port. (Fig.1)
- The Power indicator LED will turn red when when charging. The light will turn off when is fully charged.

NOTE: Do Not operate with unit while plugged in.

- The has a cordless operating time of up to **45 min.** when is fully charged.

CLEANING

- The blade is fragile - please handle with care.
- If hairs have accumulated on the guide or blade, simply blow them off or gently sweep with included brush
- **Do not rinse blade! Can cause damage.**

BLADE REPLACEMENT

Replacement blade pack are available. For optimal results, replace the blade every 5 monts, or when it no longer provides the desired results.

- Remove any attachments
- Press the clasp to gently push the blade release devise up and hold the blade to prevent falling.
- Hold the new blade by its sides and press onto handle. There will be a "click" when the blade is secure.

NOTE: Be sure the stem found under the blade head is centered prior to securing blade to unit. After replacement, if blade does not move, once turned on, remove the head, turn unit on briefly and reinstall head.



WARNING:

• DRY USE ONLY

- **Do not rinse. Only use brush to clean blade.**
- Keep out of the reach of children
- Do not place or drop in water or other liquids while plugged in.
- Do not rinse or submerge into water or other liquids.
- Unplug and remove power cord before cleaning/ using.
- Do not use trimmer while is plugged in
- The Unit contains a lithium ion battery. Do not dispose of in fire.
- Always check the unit before use. Do not use if damaged, as personal injury may occur.
- Trimmer is not intended for use on the scalp or genital area.



INCLUDES:

- | | |
|--|-----------------------|
| 1) Body of the Unit with Led light | 4) Trimm comb 5 mm |
| and Lithium Ion Battery, Indicator light | 5) Trimm comb 3 mm |
| 2) Head of the Unit | 6) USB Charging cord |
| 3) Sensa guard attachment | 7) Cleaning Brush |
| | 8) Storage carton box |